

TESTMAK CLIMATIC CHAMBERS



**TESTMAK CLIMATIC CHAMBERS
VOLUME RANGE OF 120 TO 18.000 LITERS**

TESTMAK CLIMATIC CHAMBERS

1	GENERAL DESCRIPTION	3
1.1	Handling of the operating instructions	3
2	SAFETY DEVICES AND WARNINGS	4
2.1	Safety Device	4
2.2	Safety Regulations	4
2.2.1	EC Directives and National Legislation	4
2.2.2	Mechanical Norms	5
2.2.3	Electrical Norms	5
2.3	Safety Remarks	5
2.3.1	Safety Words	5
2.3.2	Warranty and Liability Attention:	5
2.3.3	Application in Accordance with the Purpose / Misuse :	6
2.3.4	Limits of the Machine	6
2.3.5	Warning Against Remaining Dangers	6
2.4	Safety devices / Protection Caps	7
2.5	Behaviour in Case of Emergency in Relation with Refrigerating Agents	7
3	TESTMAK CLIMATIC CHAMBER MODELS	8-10
4	TECHNICAL & PHYSICAL PROPERTIES	11-19
5	CLIMATIC CABINET	20
5.1	Test Chamber	20-25
6	OPERATION WITH DELTA	26
6.1	Delta Menus	27-30
7	STARTING-UP: PREPARATION and EXECUTION	31
7.1	Requirements for the Place of Installation	31
7.2	Installation and Preparation of the Test Cabinet	33
7.3	Starting-Up	34-38
7.4	Closing Down	38
7.5	Shutdown, Disposal	38
8	MAINTENANCE	39

TESTMAK CLIMATIC CHAMBERS

1. GENERAL DESCRIPTION

1.1 Handling of the operating instructions

These operating instructions are to be permanently available on the installation.

These operating instructions are to be read and applied by any person working on/with the installation, i.e.

- Operating, including equipping, care or trouble-shooting
- Service and maintenance
- Transport

These operating instructions aim at facilitating the knowledge about the machine and the machine handling.

These operating instructions include important remarks for a secure, correct and economic installation operation.

They contribute to avoid dangers, to prevent repair costs and to reduce the failure times as well as to increase the reliability and the serviceable life of the installation.

These operating instructions contain instructions and information concerning the TMT-9220 range of climate test cabinets. They describe the assembly, starting up and function of the installation. They also include details in the case of failures and for maintenance works. The code TMT-9220 is used in these operating instructions as a designation for Testmak brand climatic test chamber.

The type designation of the TMT-9220 range of cabinets consists of;

Temperature Range : -10°C / 60 °C
Humidity Range : 20% to 95%
Capacity : 500 Liters

We reserve the right to make technical modifications, compared with representations and information given in these operating instructions, aiming at an improvement of the installation, as long as they are not in contradiction with security aspects,.